

# Hanwha - WRT/WWT- 3301/5301 - Field Replacement Unit - Memory

This document will demonstrate how to replace and install memory modules for the WRT/WWT units.

#### Step 1 - Prepare for Replacement

# Before removing the lid and performing any work inside the chassis, please ensure:

- You have powered down the unit via the Windows interface;
- The power cable has been removed from the unit;
- You are properly grounded. Simple ways to ground yourself are:
  - Wearing an ESD strap.
  - Making contact with a grounded portion of the chassis.

#### Step 2 - Contents of FRU Replacement Kit





- The kit will contain:
  - Replacement Memory Module(s)
  - (1) FRU Guide PDF

### Step 3 - Remove/Install Memory Modules



- To remove the side panels from the chassis; loosen and remove the (4) highlighted screws.
  - Do not discard or misplace the lid screws.
- Locate the Memory Modules.
- Follow the diagram:
  - Push the release tabs away from the slot and the memory module will pop UP and OUT.
  - Note the notch in the module, and the "Receptive Point" on the slot.

#### Step 4 - Remove/Install Memory Modules 2



- Only add memory to a DIMM slot that was previously populated.
- Do not add a stick of RAM to a random slot, always ensure the RAM is installed in a sequence.
- The WRT-5301 uses two memory modules.
- To install a stick of RAM:
  - Ensure the release tabs are in the open position
  - Align the notch in the module with the "Receptive Point" on the slot.
  - Then align the edges of the module with the DIMM slot on the motherboard and allow the module to slide down into the DIMM slot.
  - Once the module is properly inserted, use your thumbs and apply pressure down until the release tabs pop up and into the module and the module is locked in place.

## Step 5 - Remove/Install Memory Modules 3





- When replacing the side panels, ensure the venting is toward the bottom of the unit.
- Reinstall the (4) screws
- Memory installation is complete.