

Hanwha - WRT/WWT-3301/5301 - Hard Drive -Field Replacement Unit

This document will demonstrate how to replace and install Hard Drives for the WRT/WWT units.


Step 1 - Prepare for Hard Drive Replacement

Before removing the lid and performing any work inside the chassis, please ensure:

- You have powered down the unit via the Windows interface;
- The power cable has been removed from the unit;
- You are properly grounded. Simple ways to ground yourself are:
 - Wearing an ESD strap.
 - Making contact with a grounded portion of the chassis.

Step 2 - Contents of FRU Replacement Kit



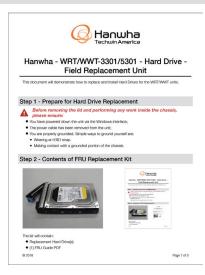

- The kit will contain:
 - Replacement Hard Drive(s)
 - (1) FRU Guide PDF

Step 3 - Drive Tray Prep



- Open the front bezel door to gain access to the Hard Drives.
 - Press the Blue button on the drive latch upward and the Drive Tray handle will pop out.
 - The drive tray can be slid out of the unit now.
- Remove the plastic drive blank.
 - Pull the two tabs away from the outside of the drive tray to release the drive blank.

Step 4 - Install Hard Drive



- Prepare the Drive Tray, Drive, and (4) Screws
- The drive will fit into the drive tray.
- Use the (4) hard drive screws to secure the drive to the drive tray
 - (2) hard drive screws per side of the drive.

Step 5 - Install Hard Drive 2



- Slide the drive back into the drive bay and push the drive arm down until it locks in place.
- Repeat this process for as many drives as required.
- Hard Drive Installation is complete.